

dyson airstrait

Dyson Airstrait™ logo

User manual

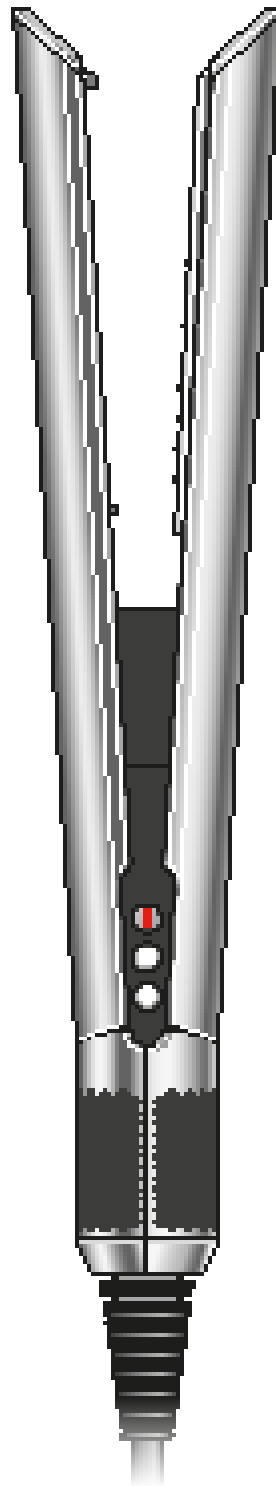


Image of Dyson Airstrait™

Contents

In the box

Getting started

Using your straightener

How to use your PRCD plug

Settings

Cleaning your machine

Cleaning the filter

Cleaning the tension bars

Cleaning the diffusers

Cleaning the integrated comb

Deep cleaning the filter

Alerts

In the box



Image of Dyson Airstrait™


Dyson Airstrait™ dryer and straightener

Straighten as you dry. 2x the shine.¹

Faster styling using only air. No heat damage.¹

1. When used in wet to dry mode.

Getting started

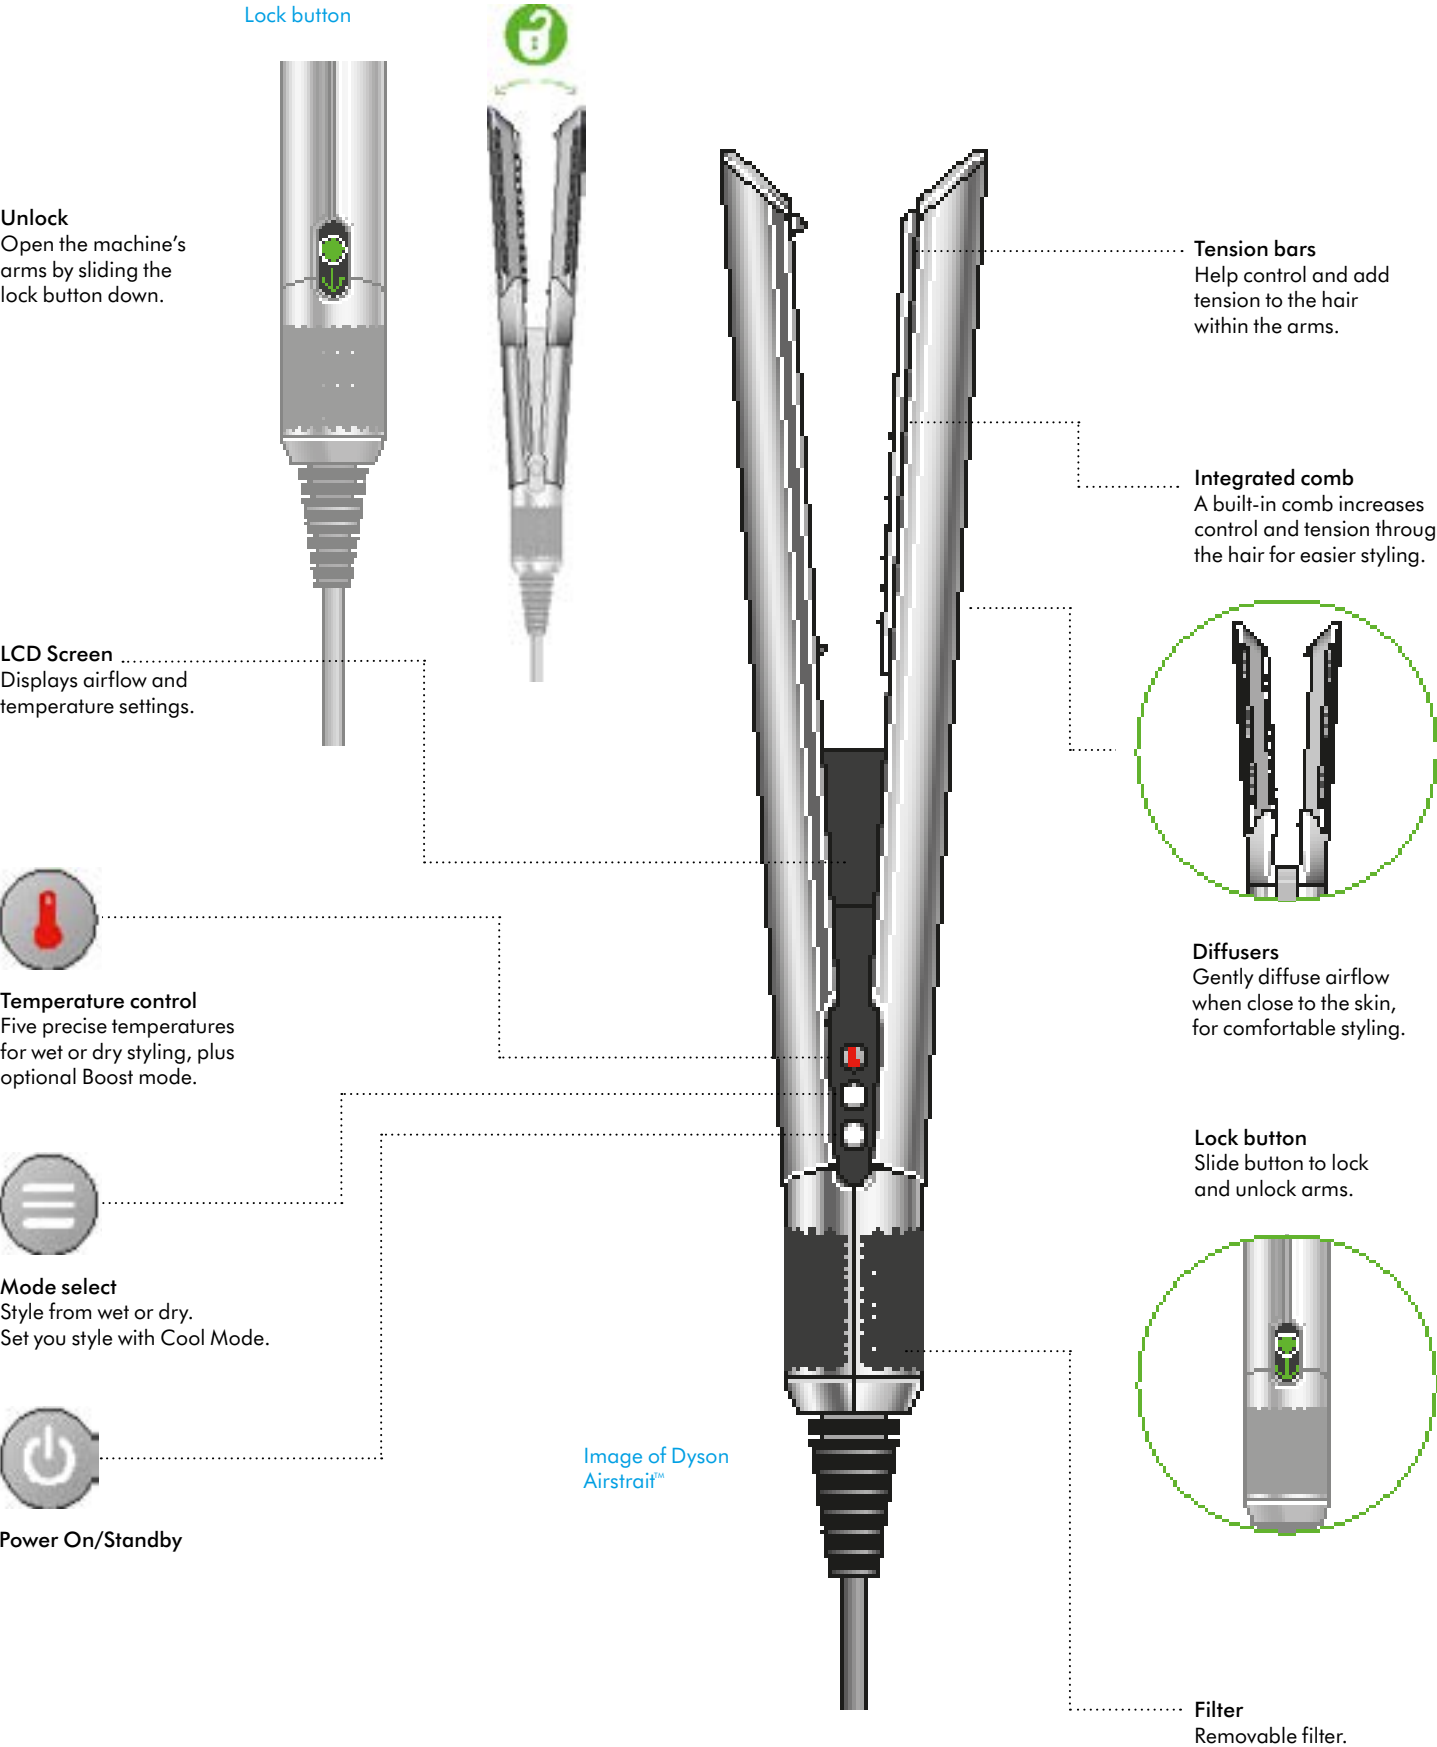

Using your straightener



Your straightener is designed to be used with towel-dried hair, not dripping wet hair. Once towel-dried, detangle your hair with a brush or comb.

Your straightener should never be used without the fan motor on.

Straightening from wet

Before starting to straighten your hair, dry your roots with the arms of your straightener closed. You can use your straightener with the arms locked or just hold them closed.



Your device's LCD screen shows a water droplet icon over hair when in Wet mode.




Unlock the arms and use the Mode select button to set your straightener to Wet mode.

Your straightener will give you a choice of temperatures that you can change, according to your hair type and styling preference. Use lower temperatures for finer hair and higher temperatures for thicker hair.

Hold your straightener so that the airflow is directed downwards and start to pass sections of hair through the arms. Repeat until each section is dry.

Change the temperature settings as required.

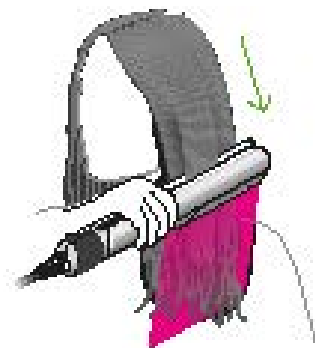

Refresh from dry


Use Dry mode only to refresh your style.

Unlock the arms and use the Mode select button to set your straightener to Dry mode.

In Dry mode, your straightener has a choice of temperatures and an additional Boost when needed.



Your device's LCD screen shows a hair icon when in Dry mode.

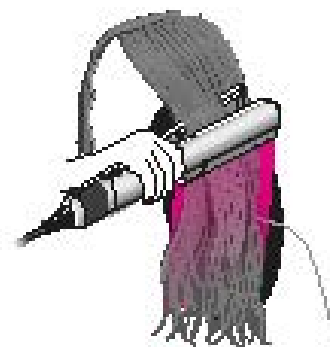

How to use your PRCD plug

More than a plug, it's a Portable Residual Current Device (PRCD). It's engineered for your safety when using the Dyson Airstrait™ straightener.

Important:

Always test before powering on.


Follow the five simple steps below, every time before styling with your machine.

Your step-by-step guide to powering on


1: Plug in

Switch on mains power.

Check the RESET button (larger one) is depressed – the red collar should not be visible.

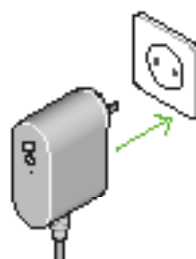

PRCD plug with a green arrow showing it's about to be inserted into a socket.

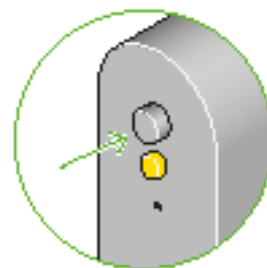

Green arrow highlighting the plug's Reset button, which is pressed in – so red collar can't be seen.


2: Test

Press the TEST button (smaller one).

The RESET button should pop out – the red collar should be visible.

Important:

Do not continue if RESET button doesn't pop out. Instead, follow the Test Fail guidance, below.

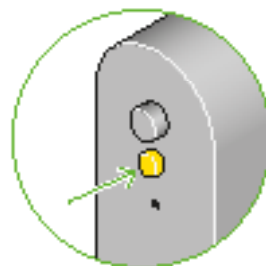

Green arrow pointing towards the plug's small yellow test button.



Reset button popping out, revealing its red collar.

3: Check LED


If there's no light, proceed to step 4.

Important:

Do not continue if LED lights up or blinks red. Instead, follow the Test Fail guidance, below.

4: Reset

Press RESET button (larger one) – red collar should not be visible.

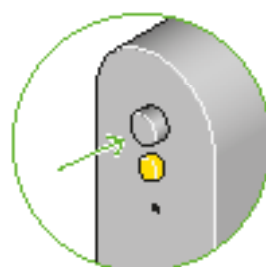

Green arrow highlighting the plug's Reset button, which is pressed in – so red collar can't be seen. No LED light is flashing.



Reset button popped out with red collar visible, and illustration of LED flashing.

5: Power on

Power on your Dyson Airstrait™ straightener.

Style away.

PRCD colours and button positioning might vary.



TEST fail guidance

If after pressing TEST and RESET, the RESET button doesn't pop out (red collar isn't visible) and/or the LED lights up or is blinking red, do not power on your appliance.


Immediately turn off the mains power switch and unplug the appliance, and contact the Dyson Helpline.

Cool mode

Use Cool mode to set your style.

Press the Mode select button to set your straightener to Cool mode.

Hold it with the arms shut and direct the airflow down the hair section to smooth and set.

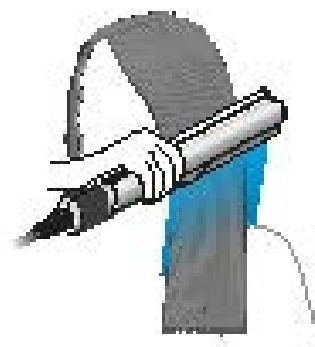


Adjusting the temperature

Press the Temperature control button to change the setting for your hair type and styling preference.





Boost

Select Boost when styling dry hair for a shot of extra heat.

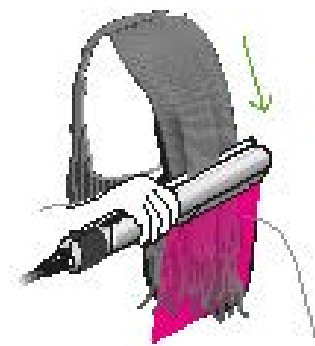


Idle mode

Between passes, your straightener will activate Idle mode. Airflow will reduce, then increase as soon as you close the arms.

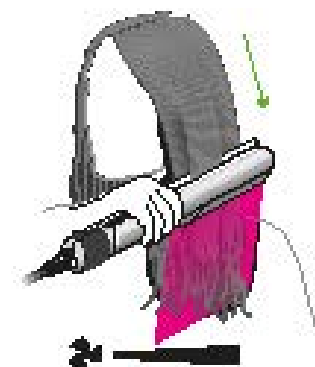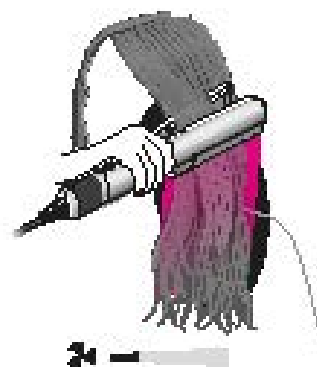


Auto pause

To save energy, your straightener will Auto pause when left for 10 seconds with the arms open. It will activate again when you pick it up.

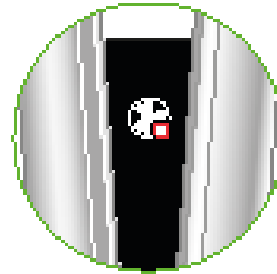

Stand-by

To save energy, your straightener will go into standby if left unattended with the arms open for more than three minutes. Press the Power button to re-activate.

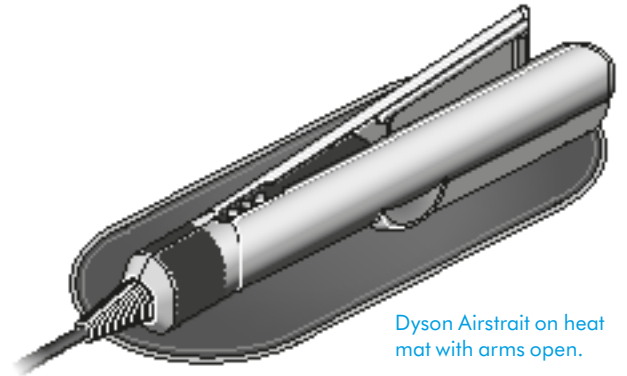

Go to www.dyson.hk for styling tips and guides.



Idle mode may cause lights to dim

High power appliances, such as your Dyson Airstrait™ straightener, may cause lights in your home to flicker or dim. They draw more electricity, which temporarily takes power away from other appliances on the same circuit.

If light dimming occurs when using your straightener, try plugging in to a different outlet and circuit. A professional can help to identify suitable outlets.

Settings

Your Dyson Airstraii™ dryer and straightener has a settings menu to help you customize your machine to your usage. Press and hold the Mode select button to access the menu on the LCD screen.

Close-up of silver Mode select button.



Hand icon holds down button to access Settings menu, illustrated by machine cogs.

Idle mode

You can enable or disable Idle mode on your device.

Press and hold the Mode select button on your straightener until the menu appears.

Follow the on-screen instructions to toggle between on and off and press the Temperature button to confirm.

Close-up of silver Mode select button.



Idle mode option toggled on.

Hand icon holds down button to access Settings menu, illustrated by machine cogs.

Auto pause

You can prevent your straightener from Auto pausing.

Press and hold the Mode select button on your straightener until the menu appears.

Use the Mode select button to scroll through the menu options. Follow the on-screen instructions to toggle between on and off, then press the Temperature button to confirm.

Close-up of silver Mode select button.



Auto-pause option toggled on.

Hand icon holds down button to access Settings menu, illustrated by machine cogs.

Units

Press and hold the Mode select button on your straightener until the menu appears.

Follow the on-screen instructions to toggle between °C and °F and press the Temperature button to confirm.

Close-up of silver Mode select button.



Units option toggled to Fahrenheit.

Hand icon holds down button to access Settings menu, illustrated by machine cogs.


Language

Press and hold the Mode select button on your straightener until the menu appears.

Press the Mode select button to scroll through the language options.

Follow the on-screen instructions to select the language you want and then press the Temperature button to confirm your selection.

Close-up of silver Mode select button.

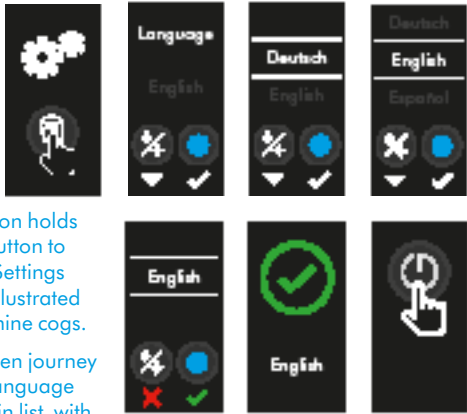

Hand icon holds down button to access Settings menu, illustrated by machine cogs.

On-screen journey shows language options in list, with buttons to navigate and confirm choice.

Hand icon presses Power button to exit.

Factory reset

Press and hold the Mode select button on your straightener until the menu appears.

Follow the on-screen instructions to start a factory reset.

Close-up of silver Mode select button.

Hand icon holds down button to access Settings menu, illustrated by machine cogs.



On-screen journey shows Factory reset option, reads 'Press and hold to reset'.


Red screens count down from five to one.

Final screen reads 'Factory reset' with green tick.

Exit

Use the Mode select button to scroll through to the Exit screen and press the Temperature button to select.

Close-up of silver Mode select button.

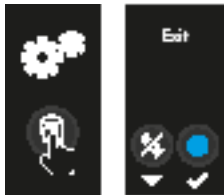

Hand icon holds down button to access Settings menu, illustrated by machine cogs.

Screen shows Exit option.

Cleaning your machine

Your straightener has been precisely engineered. To maintain outstanding styling performance, it needs to be kept free from hair product residue and debris. A little regular maintenance will optimise performance.

Cleaning the filter

Remove the filter

Unplug your straightener and let it cool down before cleaning your filter.

Hold the body of your straightener with one hand and the perforated filter unit with the other. Pull down on the filter unit to release it from the machine and onto the cable.

Gently pull the filter open and slide it off the cable.



Screen reads 'Remove', shows filter being removed in downwards motion.



Wash the filter

Leave the filter unit to soak in warm, soapy water for at least 30 minutes.

We recommend using a clarifying shampoo or dish soap.

Using your fingertips, rub gently to thoroughly clean both the inside and outside surfaces of the filter.

Shake off excess water and leave for 24 hours in a well-ventilated place until completely dry.



Screen reads 'Soak', shows filter soaking in soapy water.



Replace the filter

Pull the filter open and slide it onto the cable.

Slide the filter unit towards the machine body, align and click into place.

Your straightener will alert you if the filter isn't in place correctly.




Screen reads 'Refit', shows filter being reattached to machine.



Cleaning the tension bars

Over time, hair product residue may build up on the tension bars. These bars sit at the top of the inside of each arm and it's important to keep them clean and free from debris.

Use a soft-bristled toothbrush and a small amount of warm water to brush away any debris. Dry with a clean, lint-free cloth.

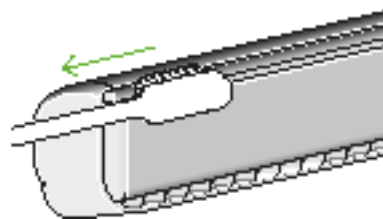


Cleaning the diffusers

The diffusers and built-in comb are attached to the sides of the straightener's arms. We recommend these are kept clean, free from debris and hair product residue. This will keep them functioning effectively.

Ensure device is switched off then slide the diffusers off the ends of the arms. Use a damp, lint-free cloth to remove any debris and hair product residue. You can also use a soft-bristled toothbrush to remove any stubborn residue.

Refit the diffusers to the arms once clean and fully dry. We recommend that you don't use your straightener without the diffusers attached.

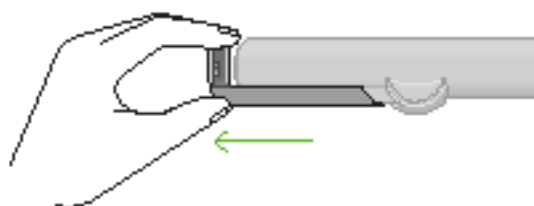

Deep cleaning the filter

If the filter becomes blocked, you can deep clean it.

Remove filter unit

Unplug your straightener and let it cool down before cleaning your filter.

Hold the body of your straightener with one hand and the perforated filter unit with the other. Pull down on the filter unit to release it from the machine and onto the cable.

Gently pull the filter open and slide it off the cable.




Screen reads 'Remove', shows filter being removed in downwards motion.



Wipe filter mesh

Wipe the filter mesh with a dry, lint-free cloth to remove any debris.

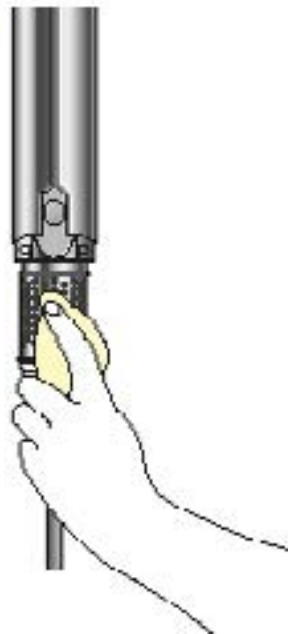

Soak filter unit

Leave the filter unit to soak in warm, soapy water for at least 30 minutes. We recommend using a clarifying shampoo or dish soap.




Screen reads 'Soak', shows filter soaking in soapy water.



Remove inner filter

Remove from the filter cage.

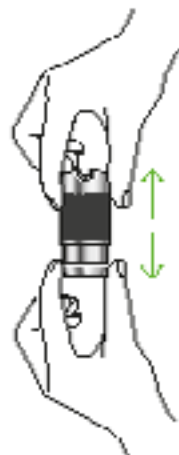

Rub gently, rinse, then dry

Using your fingertips, rub gently to thoroughly clean each part. Rinse both parts of the filter unit to remove any debris.



Icons show both parts of the filter being washed.


Allow both parts of the filter unit to air-dry completely or gently wipe with a lint-free cloth.



Icons show both parts of the filter drying to 100% dry.

Replace inner filter

Check that all debris has been removed before replacing the inner filter in the filter cage.

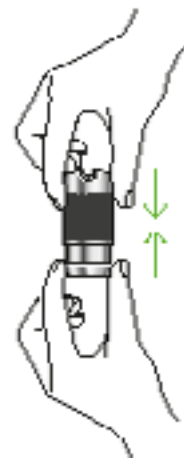

Replace filter unit

Pull the filter open and slide it onto the cable.

Slide the filter unit towards the machine body, align and click into place.

Your straightener will alert you if the filter isn't in place correctly.



Screen reads 'Refit', shows filter being reattached to machine.

Alerts

Clean filter

You can continue to use your straightener, but we recommend you clean the filter for optimum performance.

Scan the QR code on the screen to help fix this alert or follow the Cleaning your filter instructions above.




Alert screen reads 'Clean filter', icons show filter cage being removed from machine.

Filter blocked

Your straightener won't operate until the filter is cleaned.

Scan the QR code on the screen to help fix this alert or follow the Cleaning your filter instructions above.

Alert icon with text reading 'Filter blocked', followed by steps to unblock.

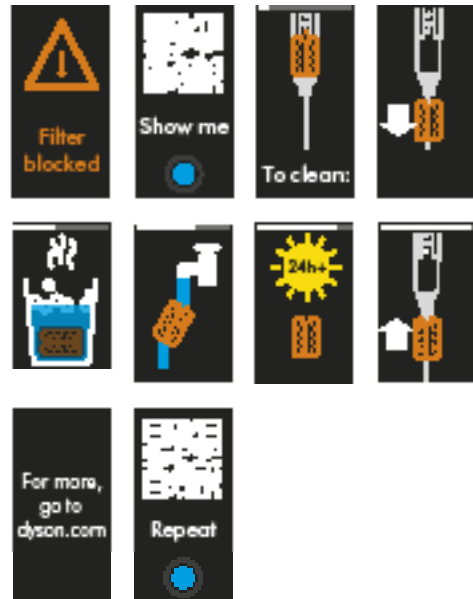

No filter

The filter isn't fitted correctly or is missing.
Your straightener won't operate until fitted.



Alert icon with text reading 'No filter', followed by steps to fit correctly.

Contact Dyson

There is a fault with your straightener. Please contact Dyson.



Volt alert

Your machine has either been plugged into a power source with the incorrect voltage or the voltage is fluctuating.

Plug into a stable, compatible power supply.



Alert icon with text reading 'Volt alert'.

Too hot

Your straightener has become too hot and will need to cool down.

Turn off your straightener, unplug and leave to cool down.



Reset

Your straightener has an error. Press the Power button to turn off your straightener and then turn it on again.

If this doesn't clear the alert, turn off your straightener and unplug from the power source. Plug in and turn on again.

