

Please read

FRONT AFTER FOLDING

IMPORTANT INSTRUCTIONS

⚠ WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has a pacemaker or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.



TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter.
5. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified persons in order to avoid a hazard.
6. Suitable for dry locations ONLY. Do not use outdoors or on wet surfaces. Do not use in bathrooms, laundry areas or similar indoor locations. Never locate the appliance where it may fall into a bath or other water containers. Do not use or store where it may get wet or in the immediate

surroundings of a bath, a shower, or a swimming pool.

7. This appliance must only be supplied at safety extra low voltage corresponding to the marking on the base. Dyson recommends that this appliance is only to be used with the power supply unit provided with it.
8. Children should be supervised to ensure that they do not play with the appliance.
9. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
10. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
11. Do not use this appliance if it has been damaged or submerged in water.
12. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
13. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
14. Chemical Burn and Choking Hazard. Keep batteries away from children. This appliance contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the appliance, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Battery replacement



CAUTION

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.

- Do not install backwards or short circuit the batteries.

- Do not attempt to dismantle or charge the batteries. Keep away from fire.

- Follow the battery manufacturers' instructions when installing new batteries (battery type CR 2032).

- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Disposal information

- Dispose of or recycle the battery in accordance with local ordinances or regulations.

- Dispose of the exhausted filter units in accordance with local ordinances or regulations.

- The battery should be removed from the product before it is discarded. When removing the battery, the appliance must be powered off.

The battery should be safely disposed of.

Registration

- After registering your 2 year guarantee, your Dyson

appliance will be covered for parts and labour for 2 years from the date of purchase, subject to the terms of the guarantee. However, indispensable legal

legislation governing the sale of consumer goods

is not affected by the terms of the guarantee. If you

have any queries regarding your Dyson appliance,

visit www.dyson.com/support for Dyson help,

general tips and useful information about Dyson.

Your guarantee

Limited 2 year guarantee

Terms and conditions of the Dyson 2 year limited guarantee

What is covered

- The repair or replacement of your Dyson appliance (at Dyson's discretion) if it is found to be defective

due to faulty materials, workmanship or function

within 2 years of purchase or delivery (if any part is

no longer available or out of manufacture, Dyson

will replace it with a functional replacement part).

- This guarantee will only be valid if the appliance

is used in the country in which it was sold.

What is not covered

- Replacement filter units. The appliance's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of an appliance where a defect is the result of:

- Damage caused by not carrying out the recommended appliance maintenance.

- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the appliance which is not in accordance with the Dyson Operating Manual.

- Use of the appliance for anything other than normal domestic household purposes.

- Use of parts not assembled or installed in accordance with the instructions of Dyson.

- Use of parts and accessories which are not genuine Dyson components.

- Faulty installation (except where installed by Dyson).

- Repairs or alterations carried out by parties other than Dyson or its authorised agents.

- Blockages.

- Normal wear and tear (e.g. fuse etc.).

- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact Dyson.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).

- You must provide proof of (both the original and any subsequent) purchase/delivery before any work can be carried out on your Dyson appliance.

Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.

- All work will be carried out by Dyson or its authorised agents.

- Any parts which are replaced by Dyson will become the property of Dyson.

Important data protection information

When registering your Dyson machine:

- You will need to provide us with basic contact information to enable us to support your guarantee.

- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.

- We never sell your information to third parties and only use information that you share with us as defined by our privacy policy which is available on our website at privacy.dyson.com.

