dyson airwrap

dyson airwrap logo

SV12 JN.000000 PN.000000-00-00
00.00.00 VERSION NO.01

User manual

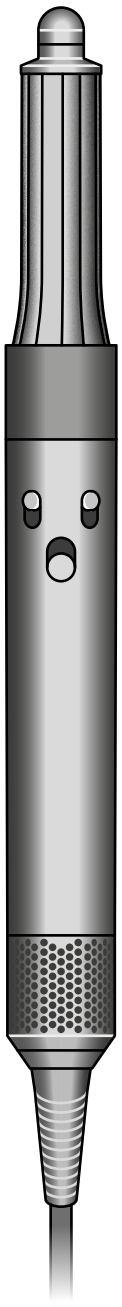

In the box
Getting started
Using your attachments
Pre-styling
Curling
Shaping
Smoothing
Regular filter maintenance

In the box

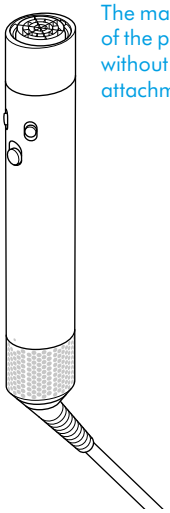

The main body of the product without any attachments.

Dyson Airwrap™ multi-styler main body



A flat, hook shaped nozzle.

Coanda smoothing dryer

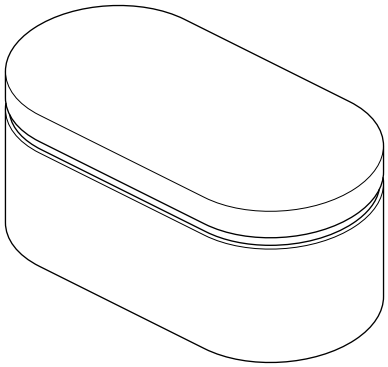

Storage case

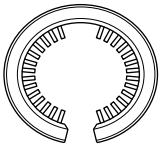

A cylindrical tool that fits on to the bottom of the Dyson airwrap styler.

Filter cleaning brush

Some attachments may not be included.

You can buy additional attachments at www.dyson.com/mynewairwrap



30mm Airwrap™ barrel



40mm Airwrap™ barrel



20mm Airwrap™ barrel



30mm Airwrap™ long barrel



40mm Airwrap™ long barrel



Soft smoothing brush



Firm smoothing brush



Small soft smoothing brush



Small firm smoothing brush



Small round volumising brush



Round volumising brush

Getting started

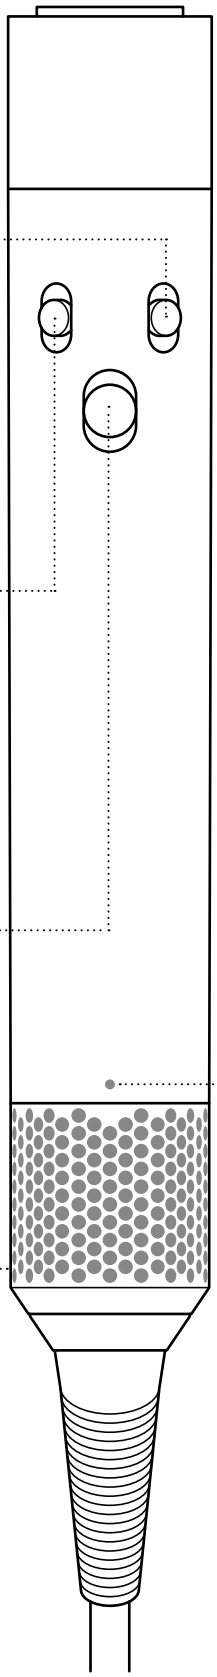



Temperature control
2 heat settings plus a cold setting to finish your style.

The temperature control button is located on the back, right hand side of the handle.



Airflow control
3 airflow speeds.

The airflow control button is located on the back, left hand side of the handle.

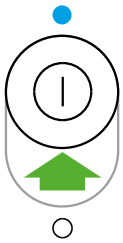

Power on/off with cold shot
Sliding switch with cold shot to set your style.

The power button is located in the middle of the handle. It is a slider button that pushes upwards and downwards.

Removable filter cage
Easy to remove for cleaning (see the 'Regular filter maintenance' section for details).

The filter cage is located at the bottom of the handle.



LED
Clean the filter.
See the 'Regular filter maintenance' section for details.

If the red LED lights, and the filter has already been cleaned, contact the Dyson Helpline.

The LED lights are loacated at the bottom of the handle above the filter cage.

Using your attachments

Connecting the attachment
Turn attachment into the main body until it fits securely.

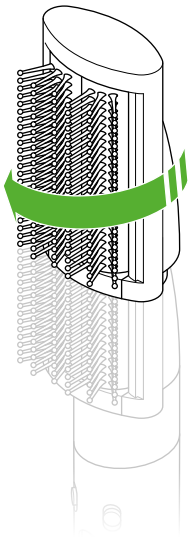

Changing attachments
To change attachment, pull down on the switch to release.

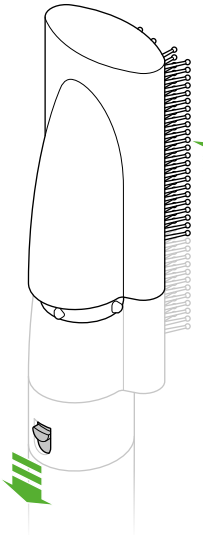

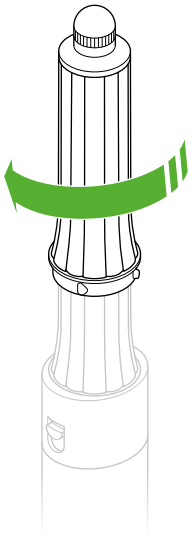

Cool touch tip
During use, the Airwrap™ barrels, Round volumising brush and Coanda smoothing dryer will get hot. To change to another attachment, hold the tip.

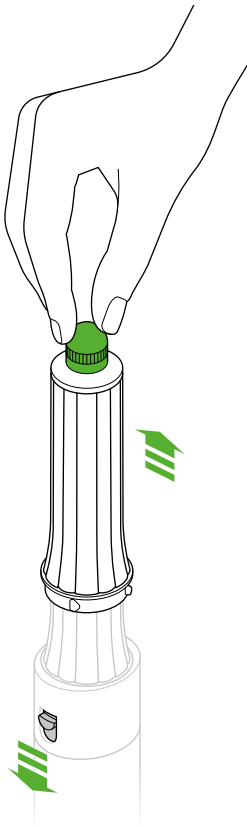



Coanda smoothing dryer



Airwrap™ barrel



Round volumising brush

Take care when handling hot attachments
Hold the attachment only in the area indicated.
Some attachments may need occasional cleaning.

For more information, go to www.dyson.com/mynewairwrap

Pre-styling



Coanda smoothing dryer
Before curling, pre-dry the hair until almost dry.

Comes with two modes (i) drying (ii) smoothing.

Use the cool tip to switch between the two modes.

Curling



Barrels

Step 1
Take a section of hair and bring barrel towards tips. Hair will start to wrap around barrel.



Step 2
Move styler towards head, no need to twist. Hold for 15 seconds or until dry.

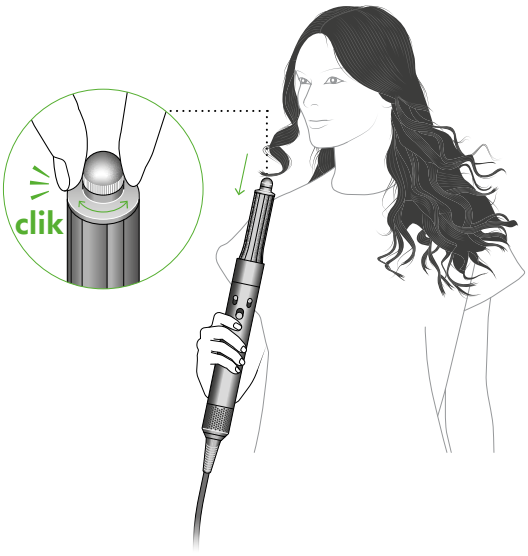

Step 3
Press cold shot for 5-10 seconds to set curl. Switch off to release.

To change curl direction, rotate the cool tip.

Shaping



Smoothing brushes

Step 1
Rough-dry hair with Coanda smoothing dryer.

Step 2
Use Smoothing brush to brush from root to tip.

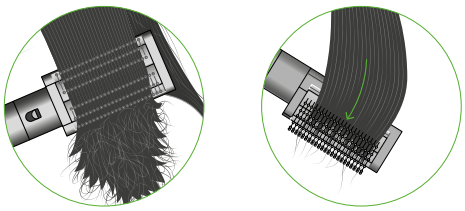

Tips:
For volume, face bristles outwards.
Turn brush inwards at the ends to create shape.

Smoothing

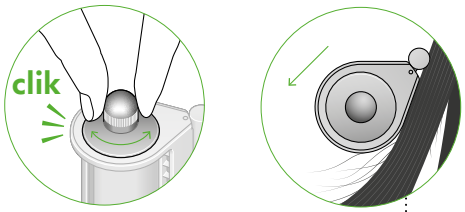

Coanda smoothing dryer

Rotate cool tip to select Smoothing mode.

Press against hair to switch airflow direction.

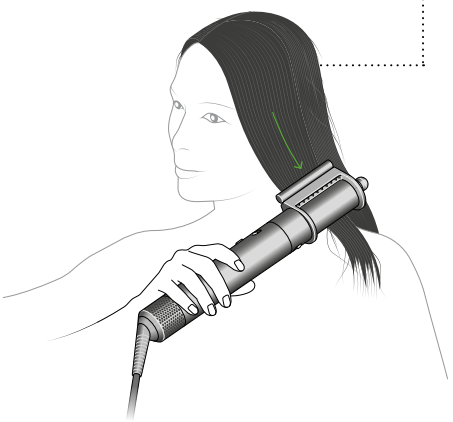

Step 3
Use on dry hair to hide flyaways.
Position against hair until it attracts then slowly run down to tips.

For use on dry and straight hair.

How to use the contact bar
Position contact bar against the head until you hear a click and hair attracts.
Run from root to tip to hide flyaways.

Regular filter maintenance

The filter must be cleaned when the white LED starts flashing.

Ensure that you unplug your appliance from the mains electricity supply and allow to cool down before cleaning your filter.

The Dyson Airwrap™ multi-styler has highly tuned technology to give outstanding performance.

This technology needs to be kept free from dust and hair product residue. Maintenance is required to maintain performance.

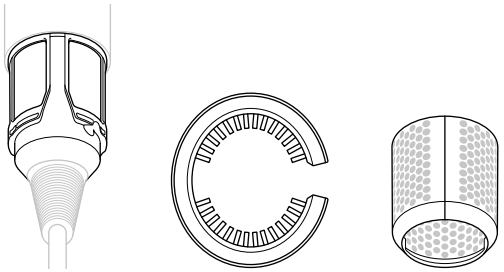

Filter mesh | Filter cleaning brush | Filter cage

Step 1
Slide the filter cleaning brush over the cable and onto the filter cage.

Using a rotating action, clean the filter cage thoroughly.

Remove the filter cleaning brush.

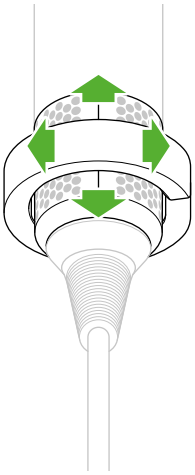

Slide the filter brush onto the filter cage and rotate to clean the filter cage.

Step 2
Hold the handle of your appliance and pull the filter cage downwards, onto the cable.

Gently pull open the filter cage and slide it off the cable.

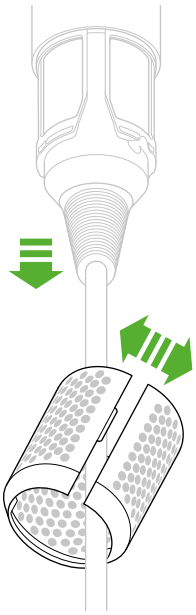

Gently pull the filter cage downwards towards the cable.

Step 3
Wash the filter cage under a warm, running tap.

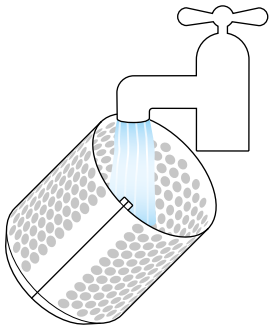

Wash the filter cage under the tap.

Step 4
Shake the filter cage to remove the majority of the excess water, then leave to dry naturally.

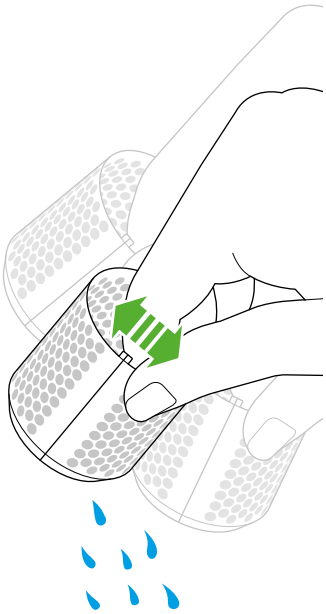

Step 5
Using a rotating and up and down action, clean the filter mesh with the filter cleaning brush until all the debris has been removed.

Do not use water or chemicals to clean the filter mesh.

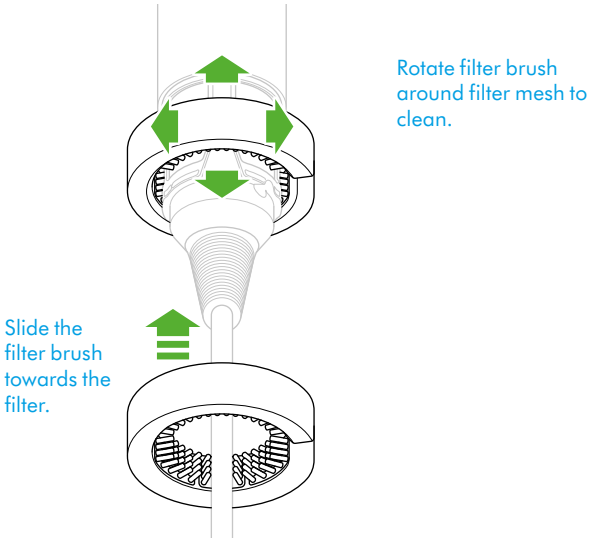

Step 6
Gently pull the filter cage open and slide it onto the cable.

Slide the filter cage towards the handle and twist until it snaps into place.

